


PARTS LIST

MODEL	MODEL 2518 ELECTRONICS
EFFECTIVE DATE	REVISED - SEPT. 1973

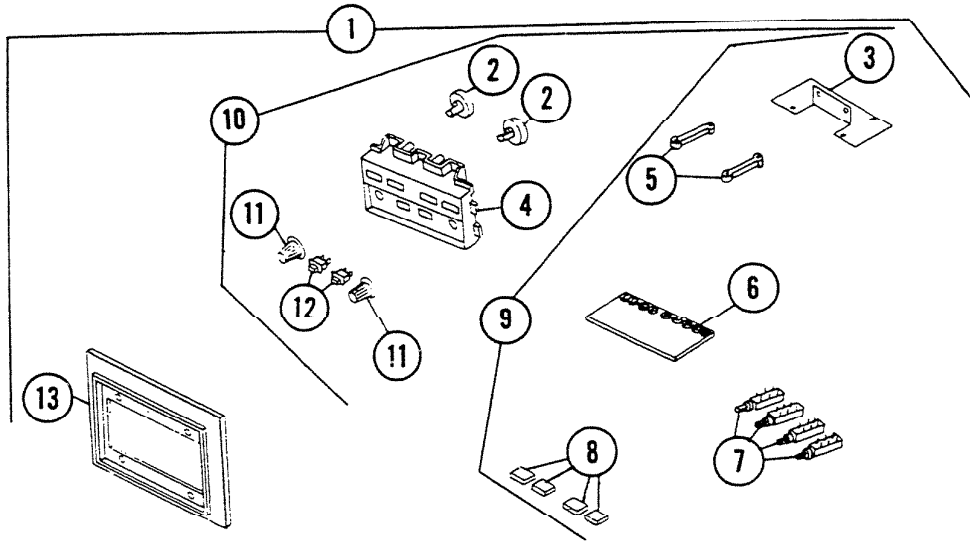

REF.	ORIGINAL PART NO	* PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.
1	41250-000	REMOTE CONTROL ASSY.	2518	15770-900
2	34044-000	POTENTIOMETER (used for Channel "A" & "B")	2518	34044-000
3	38225-000	BRACKET-PC BOARD	2518	38225-038
4	38223-000	PANEL - CONTROL INSERT	2518	38223-000
5	39088-000	SPACER	2518	39088-000
6	41096-000	PC BOARD ASSY.	2518	41096-000
7	34587-000	SWITCH (4 REQUIRED)	2518	34587-000
8	31878-000	PUSHBUTTON	2518	31878-000
9	41095-000	PC BOARD & BRACKET ASSY.	2518	41095-000
10	41094-000	CONTROL ASSEMBLY	2518	41094-000
11	39089-000	KNOB (2 REQUIRED)	2518	39089-000
12	03721-000	PUSHBUTTON COMPLETE	2518	39280-000
13	38328-000	BEZEL	2518	38328-000
-	41097-000	ENVELOPE ASSY. NOT SHOWN	2518	41097-000

NuTone Division

Order Parts From:
Parts Department c/o NuTone
P.O. Box 27 • Cincinnati, Ohio 45227

NOTE: Always order by
current part number