

Replacement Parts

MODEL IS-518 SERIES 8" INSIDE SPEAKER

SCHEMATIC SYMBOL	NUTONE PART NO.	DESCRIPTION
	9954A-000	Panel and Key Pad Assembly (walnut)
	9955A-000	Panel and Key Pad Assembly (adobe)
	9956A-000	Panel and Key Pad Assembly (white)
	9941A-000	Key Top Dial # (walnut) (number keys)
	9949A-000	Key Top Dial # (adobe) (number keys)
	9980A-000	Key Top Dial # (white) (number keys)
	9943A-000	Key Top (walnut) (intercom keys)
	9951A-000	Key Top (adobe) (intercom keys)
	9953A-000	Key Top (white) (intercom keys)
	9944A-000	Key PC Board Assembly
	9945A-000	Main PC Board Assembly
	9946A-000	PC Board Cover
	9957A-000	Speaker
	43965-000	Installation Instructions
	8072A-000	Directory Card
	9983A-000	Hardware Bag Assembly (includes (4) #8 x 2½ PH FIL HD "A" ant. copper screws)
	9839A-000	Hardware Bag Assembly (includes (4) #8 x 2½ PH FIL HD "A" bright nickel screws)

MODELS IC-502L & IC-502WH REMOTE CONTROL

SCHEMATIC SYMBOL	NUTONE PART NO.	DESCRIPTION
	9968A-000	Panel and Key Pad Assembly (adobe)
	9969A-000	Panel and Key Pad Assembly (white)
	9951A-000	Key Top (adobe) (intercom keys)
	9953A-000	Key Top (white) (intercom keys)
	9949A-000	Key Top Dial # (adobe) (number keys)
	9980A-000	Key Top Dial # (white) (number keys)
	9944A-000	Key PC Board Assembly
	9967A-000	Main PC Board Assembly
	9964A-000	PC Board Cover
	43963-000	Installation Instructions
	8072A-000	Directory Card
	42931-000	Hardware Bag Assembly (includes (2) #8 x 2½ PH FIL HD "A" bright nickel screws)