

Replacement Parts

MODEL IM-5006 RADIO INTERCOM MASTER UNIT

| SCHEMATIC SYMBOL | NUTONE PART NO. | DESCRIPTION |
|------------------|-----------------|--|
| A-1 | 9931A-000 | Front Panel |
| A-4 | 9913A-000 | LCD Window |
| A-5 | 9912A-000 | Inlay |
| A-6 | 9980A-000 | Key Top Dial (number keys) |
| A-7 | 9922A-000 | Key Top Dial (cassette keys) |
| A-8 | 9918A-000 | Key Top Dial (intercom, source keys) |
| A-9 | 9923A-000 | Key Top Dial (function keys) |
| A-10 | 9924A-000 | Key Top Dial (tuning keys) |
| A-11 | 9919A-000 | Key Top Dial (volume keys) |
| A-12 | 9920A-000 | Key Top Dial (mute, note keys) |
| A-13 | 9921A-000 | Eject Button |
| B-19 | 9974A-000 | Spring Eject Button |
| B-25 | 99142A-000 | Cassette Door Assembly (includes window) |
| B-17 | 9973A-000 | Damper – Cassette Door |
| B-18 | 9972A-000 | Spring – Cassette Door |
| | 9930A-000 | Cassette Deck Assembly |
| | 9979A-000 | Cassette Belt Set |
| | 9926A-000 | Main PC Board Assembly |
| | 9925A-000 | Control PC Board Assembly |
| | 9961A-000 | Battery PC Board Assembly |
| | 9916A-000 | Main Key PC Board Assembly |
| | 9917A-000 | Intercom Key PC Board Assembly |
| | 9915A-000 | LCD Module |
| | 9927A-000 | Speaker |
| | 9928A-000 | Battery Ni-Cad 4.8v |
| | 9839A-000 | Hardware Bag Assembly (includes mounting bracket and screws) |
| | 43914-000 | Installation Instructions |
| | 43915-000 | Homeowners Manual |

MODEL IS-515 SERIES 5" INSIDE SPEAKER

| SCHEMATIC SYMBOL | NUTONE PART NO. | DESCRIPTION |
|------------------|-----------------|--|
| | 9940A-000 | Panel and Key Pad Assembly (walnut) |
| | 9948A-000 | Panel and Key Pad Assembly (adobe) |
| | 9952A-000 | Panel and Key Pad Assembly (white) |
| | 9941A-000 | Key Top Dial # (walnut) (number keys) |
| | 9949A-000 | Key Top Dial # (adobe) (number keys) |
| | 9980A-000 | Key Top Dial # (white) (number keys) |
| | 9943A-000 | Key Top (walnut) (intercom keys) |
| | 9951A-000 | Key Top (adobe) (intercom keys) |
| | 9953A-000 | Key Top (white) (intercom keys) |
| | 9944A-000 | Key PC Board Assembly |
| | 9945A-000 | Main PC Board Assembly |
| | 9946A-000 | PC Board Cover |
| | 9947A-000 | Speaker |
| | 43964-000 | Installation Instructions |
| | 8072A-000 | Directory Card |
| | 42930-000 | Hardware Bag Assembly (includes (2) #8 x 2½ PH FIL HD "A" ant. copper screws) |
| | 42931-000 | Hardware Bag Assembly (includes (2) #8 x 2½ PH FIL HD "A" bright nickel screws) |