


PARTS LIST

| | | |
|----------------|--|---------------|
| EFFECTIVE DATE | MODEL | PRODUCT GROUP |
| JAN. 1990 | IS-208WH NEW IS-208D IS-208L REVISED | ELECTRONICS |

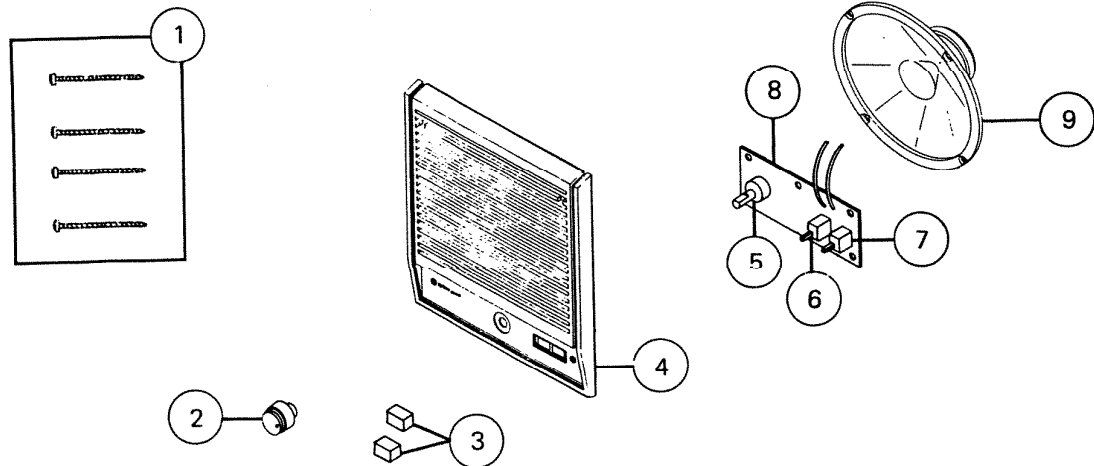

| REF. | ORIGINAL PART NO. | * PART DESCRIPTION | MODEL USED ON | CURRENT REPLACEMENT PART NO. |
|------|-------------------|--------------------------------|---------------------|------------------------------|
| 1 | 42932 | MOUNTING SCREWS | IS-208D | 42932-000 |
| | 42933 | | IS-208L IS-208WH | 42933-000 |
| 2 | 35475 | VOLUME KNOB | IS-208D | 35475-000 |
| | 35478 | | IS-208L | 35506-000 |
| | 35827 | | IS-208WH | 35827-000 |
| 3 | 35473 | SWITCH KNOB - (2) | All Models | 0553A-000 |
| 4 | 42922 | SPEAKER PANEL ONLY | IS-208D | 35469-000 |
| | 42923 | | IS-208L | 35470-000 |
| | 30886 | | IS-208WH | 30886-000 |
| 5 | 34059 | POTENTIOMETER - Volume Control | | 34059-000 |
| 6 | 34698 | MOMENTARY SWITCH | | 34698-000 |
| 7 | 34697 | LATCHING SWITCH | All Models | 34697-000 |
| 8 | 42928 | P.C. BOARD ASSEMBLY | | 42928-000 |
| 9 | 36089 | SPEAKER 8" | | 36089-000 |

↑

NOTE: Always order by current part number.