


PARTS LIST

EFFECTIVE DATE	MODEL	PRODUCT GROUP
AUGUST 1980	IS-48D/L, ISA-48D/L REVISED ISA-48W – NEW	ELEC-TRONICS

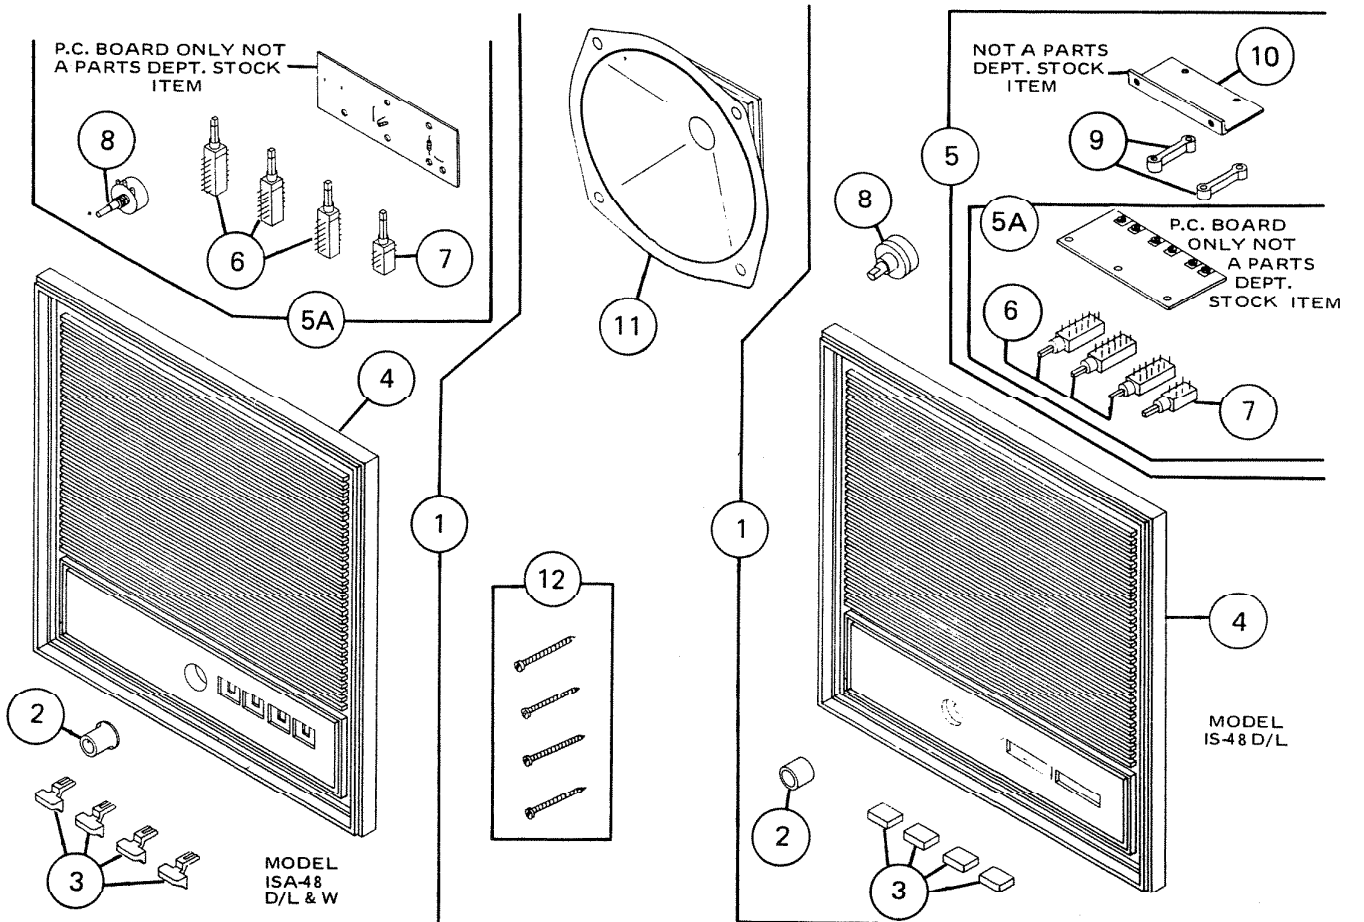

REF.	ORIGINAL PART NO.	* PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.
1	13723	SPEAKER COMP.	IS-48D	42025-000
	13724		ISA-48D	
	13725		IS-48L	42436-000
	13726		ISA-48L	
	13727		ISA-48W	13727-900
2	39346	KNOB	IS-48D	39698-000
	39557		ISA-48D	39557-000
	39380		IS-48L	39700-000
	39557		ISA-48L ISA-48W	39557-000
(PLEASE SEE OTHER SIDE)				

NuTone Division
Scovill

NOTE: Always order by current part number.

PL — IS-48 D/L-ISA-48 W

REF	ORIGINAL PART NO.	* PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.
3	31878	PUSHBUTTON/OPERATING ARM (1) – 4 REQUIRED	IS-48D/L	31878-000
	38729		ISA-48D/L ISA-48W	38729-000
4	38534	SPEAKER PANEL – REMOTE	IS-48D	38534-000
	38535		IS-48L	38535-000
	38975		ISA-48D	38975-000
	38976		ISA-48L	38976-000
	38979		ISA-48W	38979-000
5	41495	P.C. BOARD W/BACKET ASSEMBLY	IS-48D/L	41495-000
5A	41502	P.C. BOARD ASSEMBLY	IS-48D/L	41502-000
	41795		ISA-48D/L ISA-48W	1563A-000
6	34636	PUSH SWITCH 4 P.D.T. (1) – 3 REQUIRED	IS-48D/L ISA-48D/L ISA-48W	34636-000
7	34637	PUSH SWITCH D.P.D.T.	IS-48D/L ISA-48D/L ISA-48W	34637-000
8	34063	POTENITOMETER	IS-48D/L	34063-000
	34059		ISA-48D/L ISA-48W	34059-000
9	39088	SPACER (1) – 2 REQUIRED	IS-48D/L	39088-000
10	-----	NOT A PARTS DEPT. STOCK ITEM	IS-48D/L	-----
11	36089	SPEAKER	IS-48D/L ISA-48D/L ISA-48W	36089-000
12	41622	ENVELOPE ASSEMBLY MOUNTING SCREWS (4)	IS-48D ISA-48D	41622-000
	41623		IS-48L ISA-48L	41623-000
	42437		ISA-48W	42437-000