

Replacement Parts

MODEL IC-502LW OUTSIDE REMOTE CONTROL

SCHEMATIC SYMBOL	NUTONE PART NO.	DESCRIPTION
	9965A-000	Panel and Key Top Membrane Assembly: Panel Key Top Membrane
	9960A-000	Key PC Board Assembly (humi sealed)
	9963A-000	Main PC Board Assembly (humi sealed)
	9964A-000	PC Board Cover
	8072A-000	Directory Card
	43963-000	Installation Instructions
	42931-000	Hardware Bag Assembly (incudes (2) #8 x 2½ PH FIL HD "A" bright nickel screws)

MODEL IS-519 5" OUTSIDE SPEAKER

SCHEMATIC SYMBOL	NUTONE PART NO.	DESCRIPTION
	9958A-000	Panel and Key Top Membrane Assembly: Panel Key Top Membrane
	9960A-000	Key PC Board Assembly (humi sealed)
	9963A-000	Main PC Board Assembly (humi sealed)
	9946A-000	PC Board Cover
	5916A-000	Speaker (weather proof)
	9984A-000	Gasket
	43964-000	Installation Instructions
	42931-000	Hardware Bag Assembly (incudes (2) #8 x 2½ PH FIL HD "A" bright nickel screws)