


PARTS LIST

EFFECTIVE DATE	MODEL	PRODUCT GROUP
JAN. 1990	IS-69,PB,WH IS-70,PB,WH NEW	ELECTRONICS

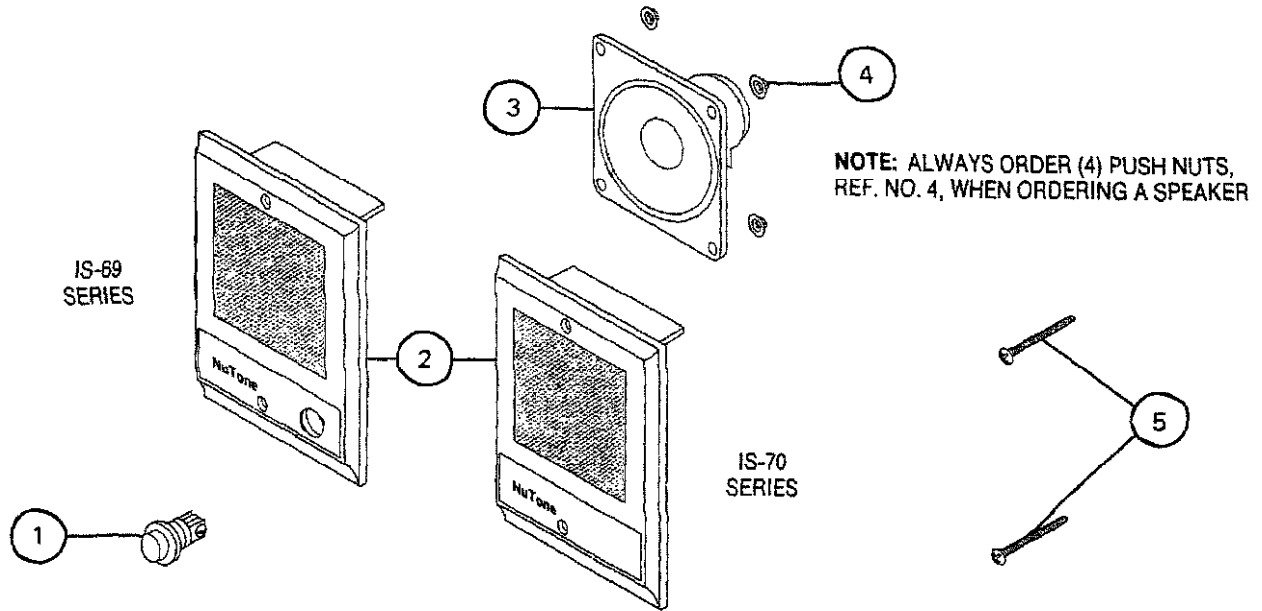

REF.	ORIGINAL PART NO.	* PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.	
1	H0674	PUSHBUTTON	ALL IS-69 SERIES	PB18 LCL	
2	1986A	SPEAKER PANEL	Antique Brass	IS-69	1986A-000
	1987A			IS-70	1987A-000
	1988A		Polished Brass	IS-69PB	1988A-000
	1989A			IS-70PB	1989A-000
	1996A		White	IS-69WH	1996A-000
	1997A			IS-70WH	1997A-000
3	36076	SPEAKER - 3½" - 16 OHM - SEE NOTE:	ALL MODELS	36076-000	
4	39044	PUSH NUT (1) - (4) REQUIRED		39044-000	
5	31526	SCREW SET (2)	IS-69 IS-70	40966-000	
			IS-69PB IS-70PB	1998A-000	
			IS-69WH IS-70WH	36330-000	
*	00475	BULB - FOR PUSHBUTTON (2) - NOT SHOWN	ALL IS-69 SERIES	PBL 2	

↑

NOTE: Always order by current part number.