


NUTONE
 Model
MC-302
DOOR CHIME
 Parts List

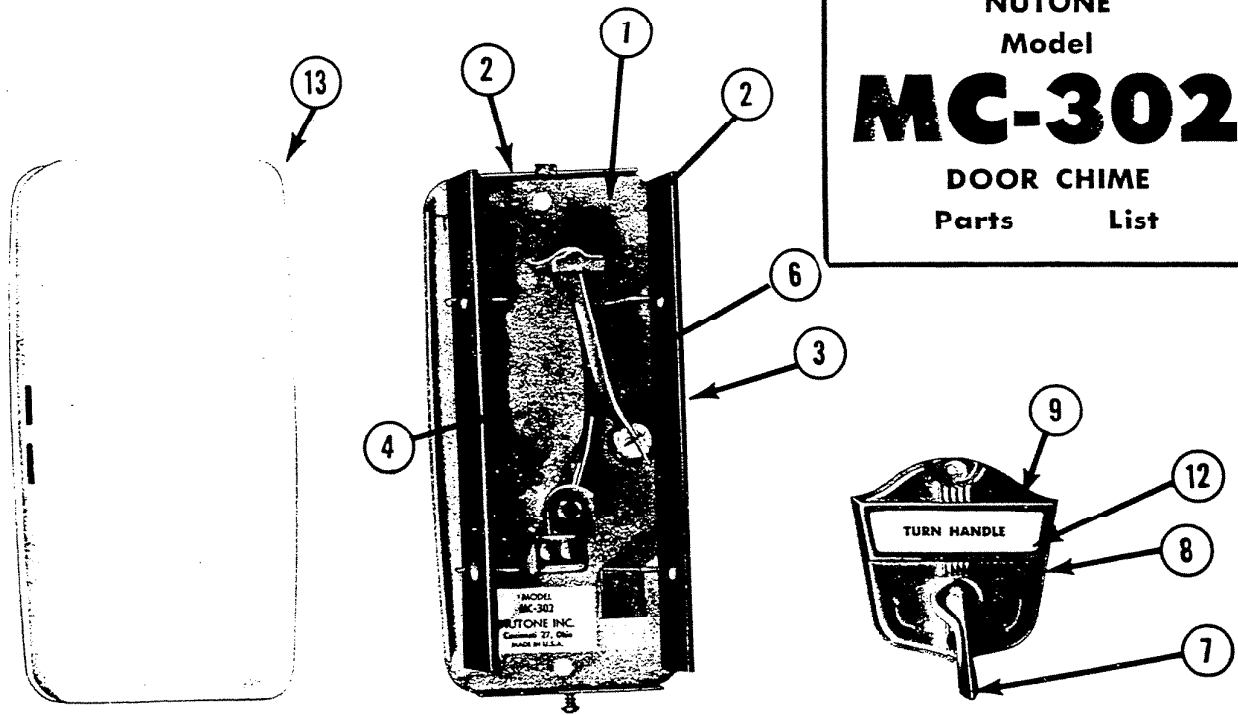

MC-302 GREETER		Description	Solid Brass Outside — White or Walnut Finish Cover
		Size	
		Chime Operation	2 Notes
ILLUSTR. NO.	PART NO.	PART DESCRIPTION	PRICE
1	2837	Base Plate Complete (Includes Reed Assembly, Activating Arm Assembly, Base Plate)	Adjustable fits metal or wood doors $\frac{7}{8}$ " to 2 $\frac{1}{2}$ ". For doors thicker than 2 $\frac{1}{4}$ " or for installation in walls up to 9". Ask for shaft EX 310.
2	2836	Base Plate Only (Includes Reed Studs, Upper and Lower Angles)	
3	1515	R. H. Reed Assembly (Includes Grommets)	
4	1514	L. H. Reed Assembly (Includes Grommets)	
5	5194	Felt Pad	
6	2492	Activating Arm Assembly (Includes Arm, Hammer, Springs, Bearings)	
7	2481	Handle and Shaft Assembly	
8	2482	Escutcheon Plate Assembly (Includes Escutcheon Plate, Retainer, Speed Nut, Window, Name Card and Backing)	
9	2464	Escutcheon Plate	
10	2466	Retainer	
11	2434	Speed Nut	
12	2472	Window	
13	2452	Cover (designate color)	

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

Order Parts From: PARTS DEPT. C/O

NuTone

*Part used on other model/s

Madison and Red Bank Rds., Cincinnati, O. 45227

Printed in U.S.A.