
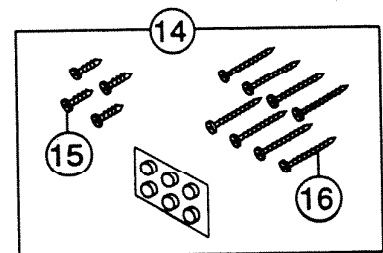
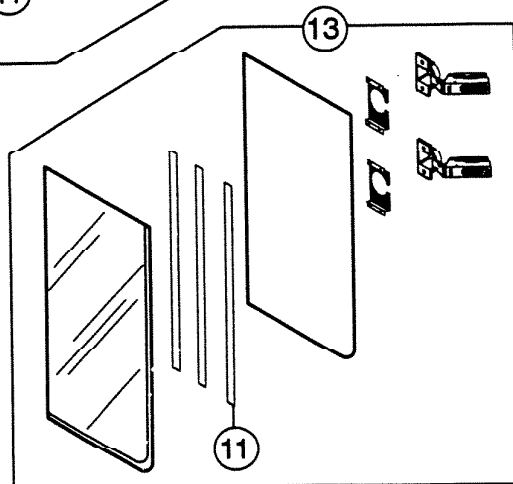
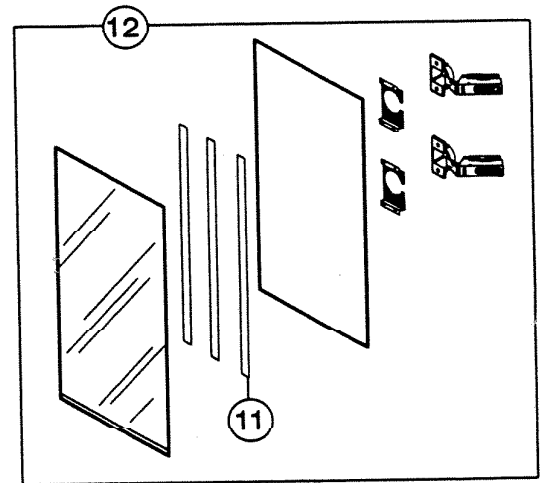
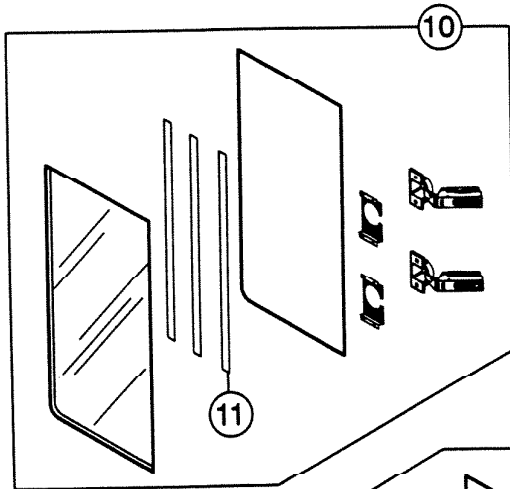
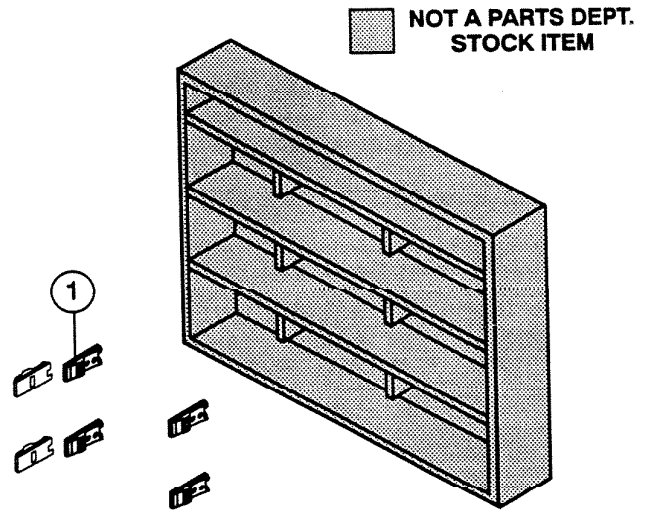


NuTone PARTS LIST

EFFECTIVE DATE	MODEL NUMBER	PRODUCT GROUP
DECEMBER 1993	3730LBE 3736LBE NEW	BATH CABINET

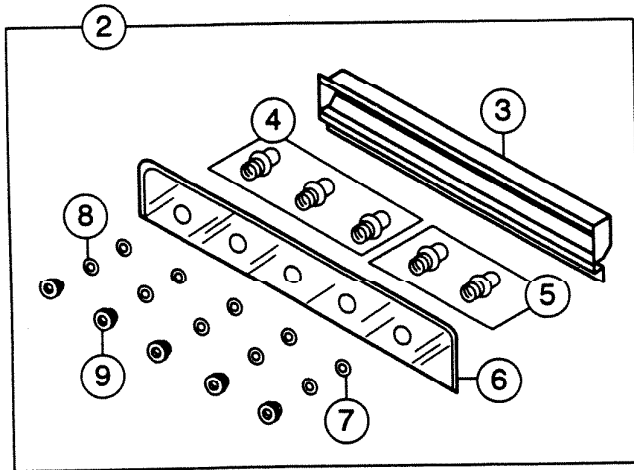

REF.	ORIGINAL PART NO.	*PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.	
1	M7099	HINGE BASEPLATE – requires 6	3730LBE 3736LBE	M7099-000	
—	M2531	SCREW – #6-32 x ½ PH FLAT HD “F”	3730LBE 3736LBE	M2531-015	
—	27603	SCREW – #8-32 x 5/16 HEX/W HD “TR”	3730LBE 3736LBE	27603-015	
—	L3236	GROUND SCREW	3730LBE 3736LBE	L3236-000	
2	M2884	FIXTURE COVER ASSEMBLY COMPLETE	3730LBE	M2884-000	
	M2885		3736LBE	M2885-000	
3	M2391	FIXTURE COVER	3730LBE	M2391-000	
	M2392		3736LBE	M2392-000	
4	M2102	HARNESS SET – 3 socket	requires 1 requires 2	3730LBE 3736LBE	M2102-000
5	M2101	HARNESS SET – 2 socket – requires 1	3730LBE	M2101-000	
6	M2603	MIRROR – beveled	3730LBE	M2603-000	
	M2604		3736LBE	M2604-000	
7	M2561	FIBER WASHER	requires 5 requires 6	3730LBE 3736LBE	M2561-000
8	M2560	WASHER	requires 5 requires 6	3730LBE 3736LBE	M2560-039
9	M2136	FINISHING NUT	requires 5 requires 6	3730LBE 3736LBE	M2136-039
10	M6408	LEFT HAND DOOR ASSEMBLY COMPLETE	3730LBE	M6408-000	
	M6411		3736LBE	M6411-000	
11	95953	DOUBLE FACED TAPE	3730LBE 3736LBE	95953-000	
12	M6407	CENTER DOOR ASSEMBLY COMPLETE	3730LBE	M6407-000	
	M6410		3736LBE	M6410-000	
13	M6406	RIGHT HAND DOOR ASSEMBLY COMPLETE	3730LBE	M6406-000	
	M6409		3736LBE	M6409-000	
14	M6349	HARDWARE BAG ASSEMBLY – see note	3730LBE 3736LBE	M6349-000	
15	M2104	SCREW – #6 x 3/16 PH TRUSS HD “B” – requires 4	3730LBE 3736LBE	M2104-015	
16	52842	SCREW – #8 x 1¼ PH PAN HD “A” – requires 8	3730LBE 3736LBE	52842-015	

NOTE: HARDWARE BAG ASSEMBLY CONTAINS:
(8) Screws #8 x 1¼ PH PAN HD “A”
(4) Screws #6 x 3/16 PH TRUSS HD “B”
(1 strip of 6) White Bumpers

NOTE: Always order by
current part number