
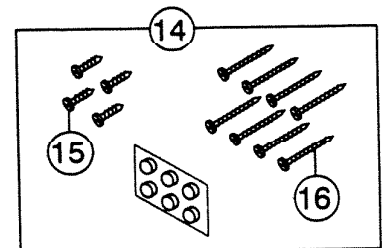
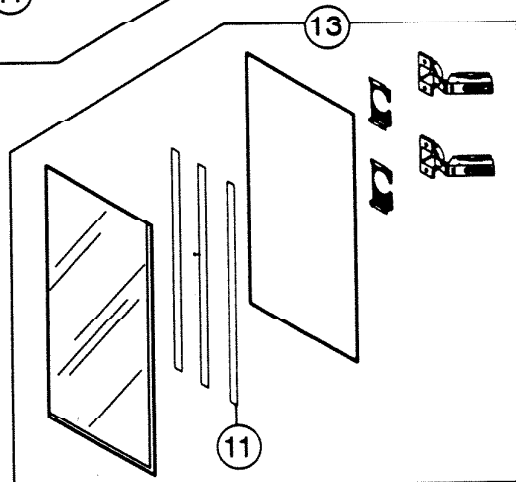
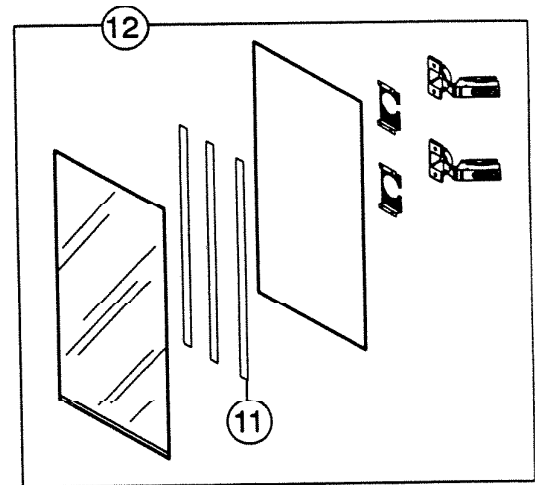
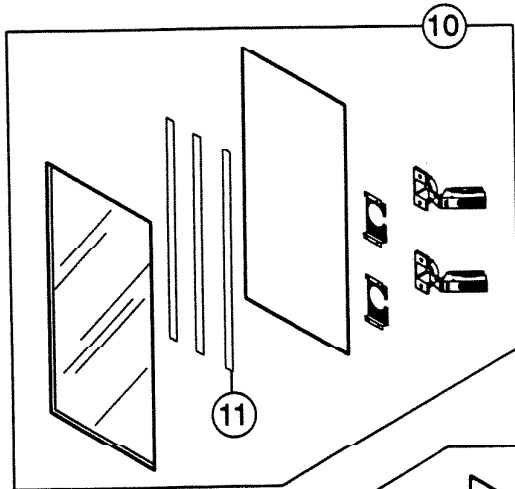
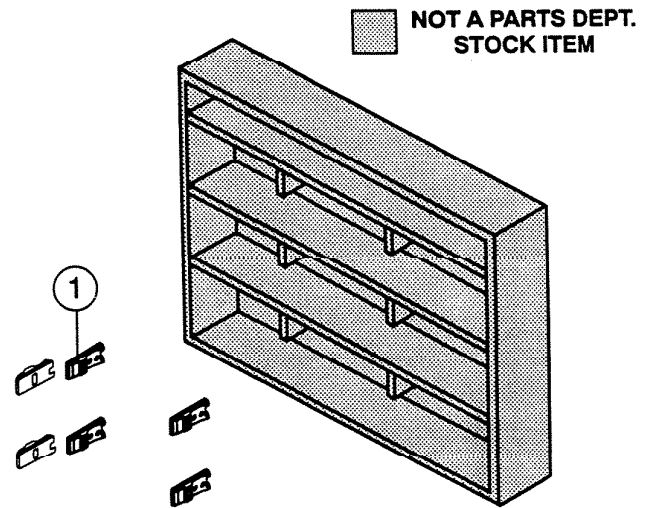



NuTone PARTS LIST

EFFECTIVE DATE	MODEL NUMBER	PRODUCT GROUP
DECEMBER 1993	3830LBE 3836LBE NEW	BATH CABINET

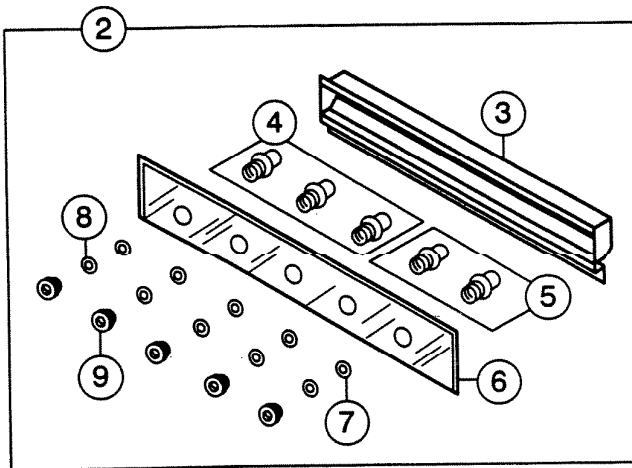

REF.	ORIGINAL PART NO.	*PART DESCRIPTION	MODEL USED ON	CURRENT REPLACEMENT PART NO.	
1	M7099	HINGE BASEPLATE – requires 6	3830LBE 3836LBE	9020M-000	
—	M2531	SCREW – #6-32 x ½ PH FLAT HD “F”	3830LBE 3836LBE	M2531-015	
—	27603	SCREW – #8-32 x 5/16 HEX/W HD “TR”	3830LBE 3836LBE	27603-015	
—	L3236	GROUND SCREW	3830LBE 3836LBE	L3236-000	
2	M2879	FIXTURE COVER ASSEMBLY COMPLETE	3830LBE	M6326-000	
	M2880		3836LBE	M6328-000	
3	M2391	FIXTURE COVER	3830LBE	M2391-000	
	M2392		3836LBE	M2392-000	
4	M2102	HARNESS SET – 3 socket	requires 1	3830LBE 3836LBE	M2102-000
			requires 2		
5	M2101	HARNESS SET – 2 socket – requires 1	3830LBE	M2101-000	
6	M2598	MIRROR – beveled	3830LBE	M2598-000	
	M2599		3836LBE	M2599-000	
7	M2561	FIBER WASHER	requires 5	3830LBE 3836LBE	M2561-000
			requires 6		
8	M2560	WASHER	requires 5	3830LBE 3836LBE	M2560-039
			requires 6		
9	M2136	FINISHING NUT	requires 5	3830LBE 3836LBE	M2136-039
			requires 6		
10	M2856	LEFT HAND DOOR ASSEMBLY COMPLETE	3830LBE	M6431-000	
	M2857		3836LBE	M6418-000	
11	95953	DOUBLE FACED TAPE	3830LBE 3836LBE	95953-000	
12	M2860	CENTER DOOR ASSEMBLY COMPLETE	3830LBE	M6407-000	
	M2861		3836LBE	M6410-000	
13	M2864	RIGHT HAND DOOR ASSEMBLY COMPLETE	3830LBE	M6430-000	
	M2865		3836LBE	M6417-000	
14	M6349	HARDWARE BAG ASSEMBLY – see note	3830LBE 3836LBE	M6349-000	
15	M2104	SCREW – #6 x 3/16 PH TRUSS HD “B” – requires 4	3830LBE 3836LBE	M2104-015	
16	52842	SCREW – #8 x 1¼ PH PAN HD “A” – requires 8	3830LBE 3836LBE	52842-015	

NOTE: HARDWARE BAG ASSEMBLY CONTAINS:
(8) Screws #8 x 1¼ PH PAN HD “A”
(4) Screws #6 x 3/16 PH TRUSS HD “B”
(1 strip of 6) White Bumpers


NOTE: Always order by current part number