


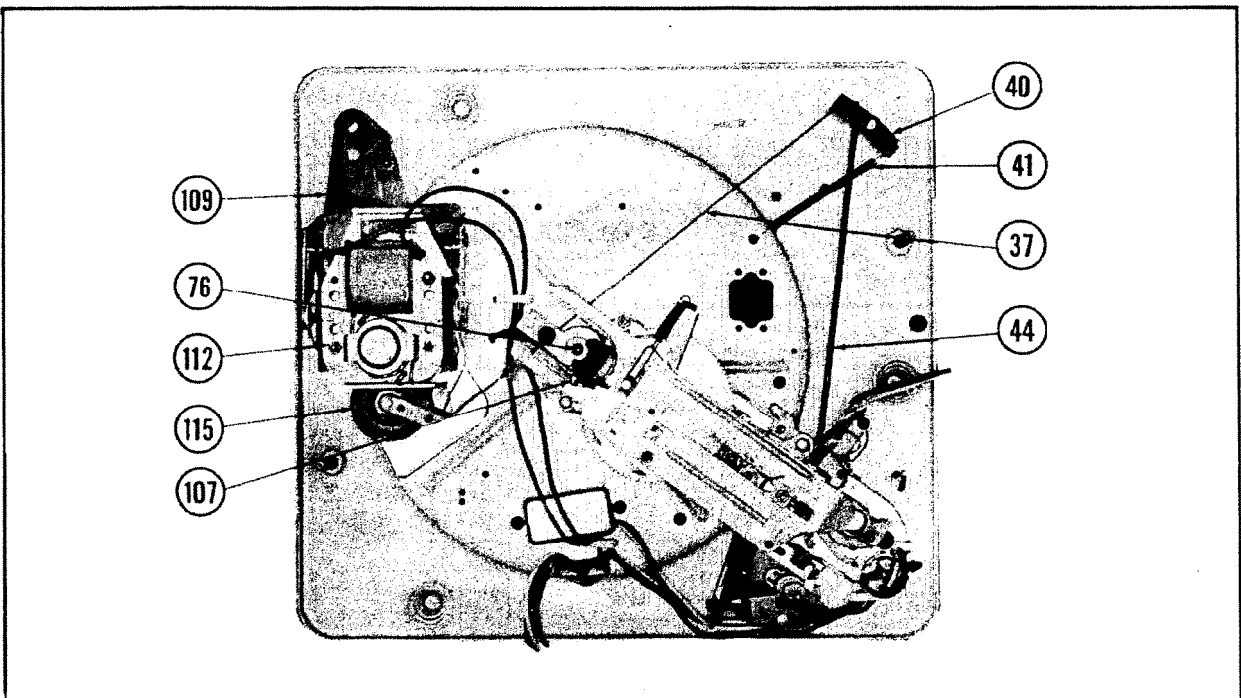


MODEL 2403-B RECORD CHANGER

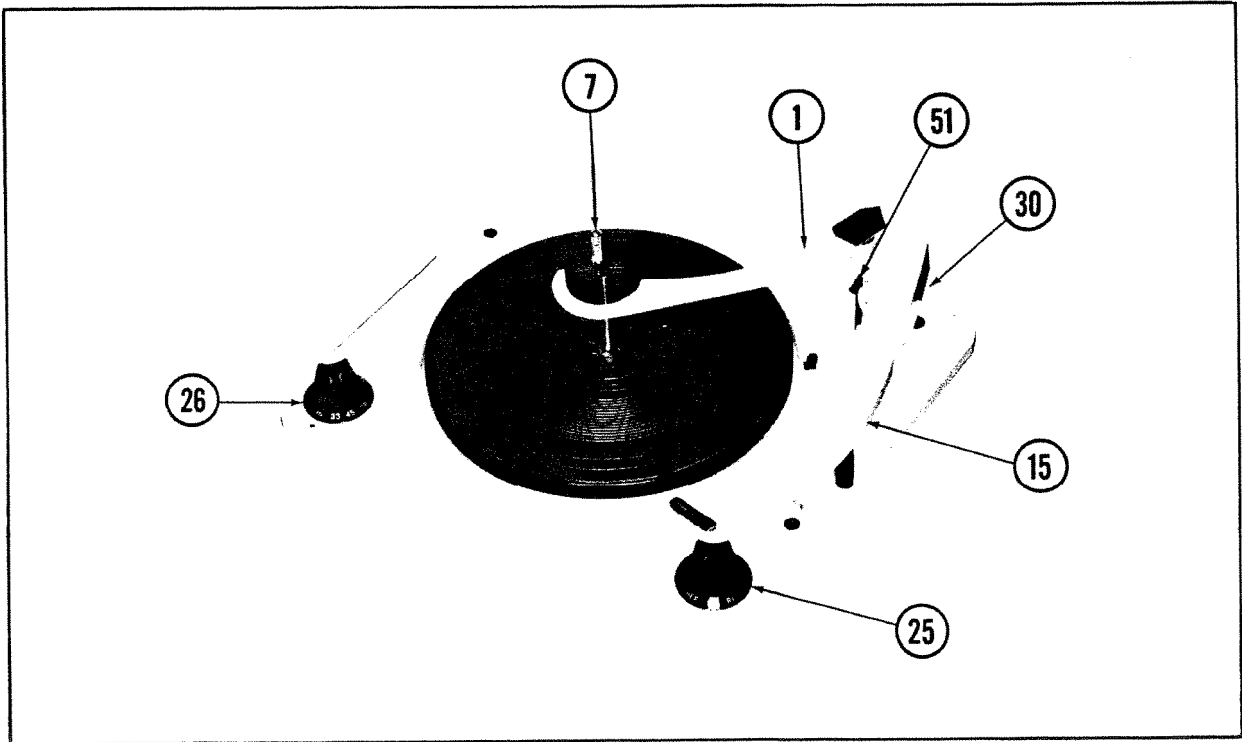


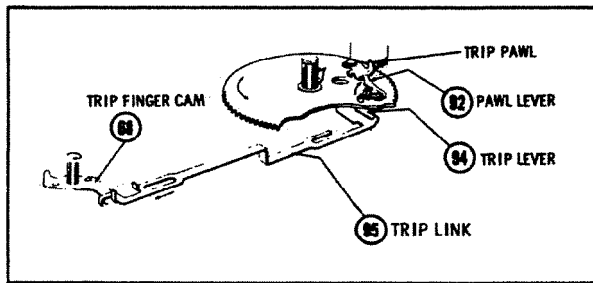


Trip Mechanism Parts.

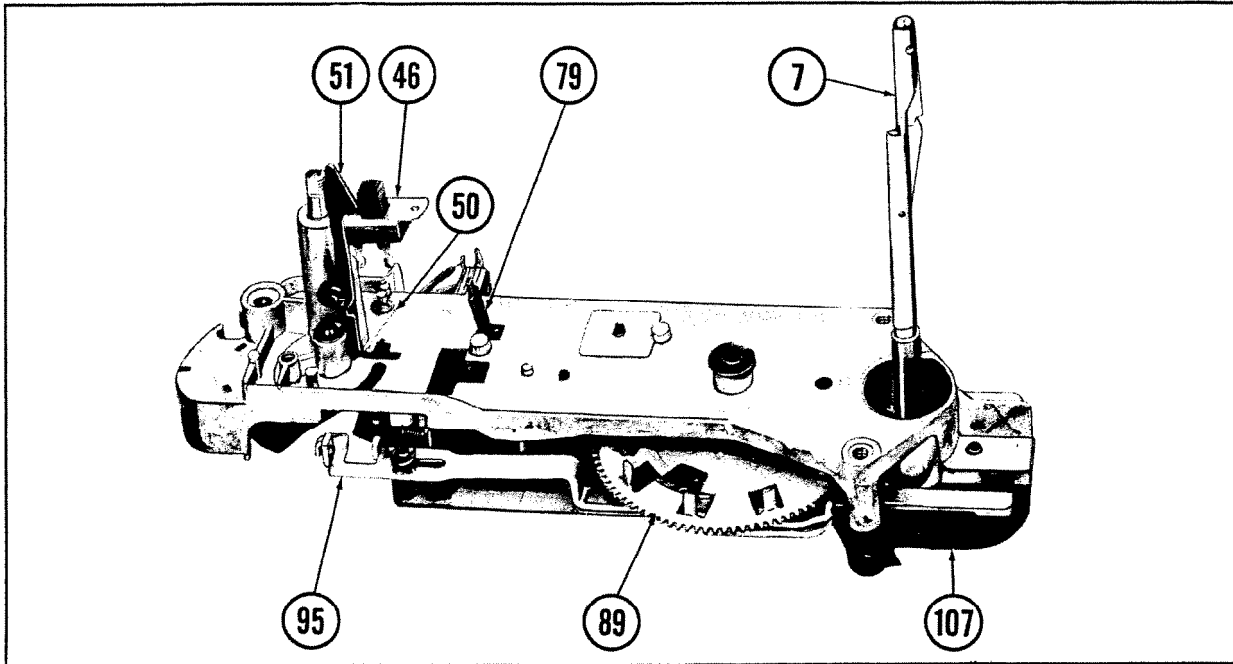


Top View Of Cycling Mechanism.

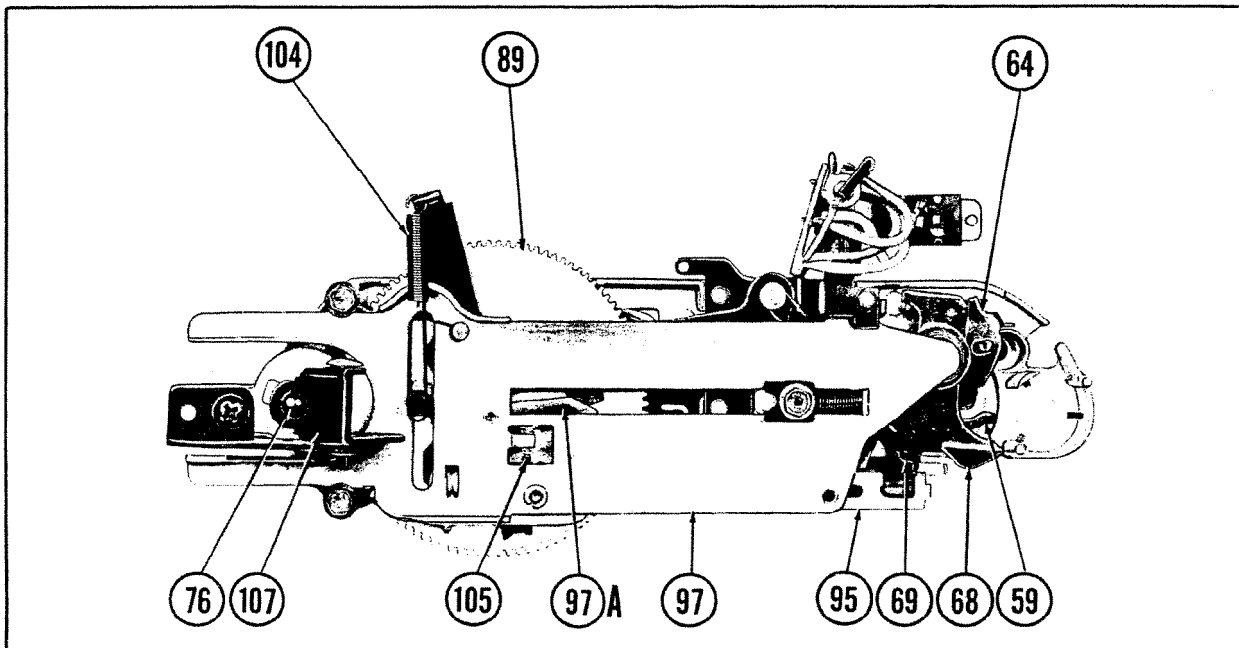


Bottom Biew Of Cycling Mechanism.

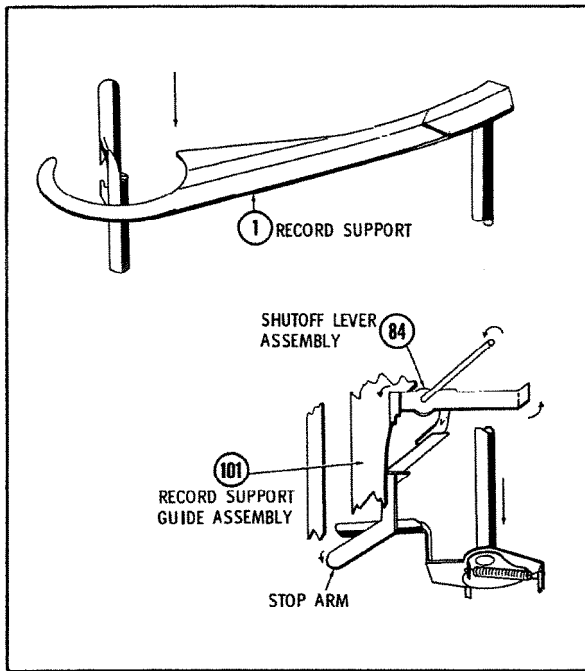


Shutoff Mechanism Parts.

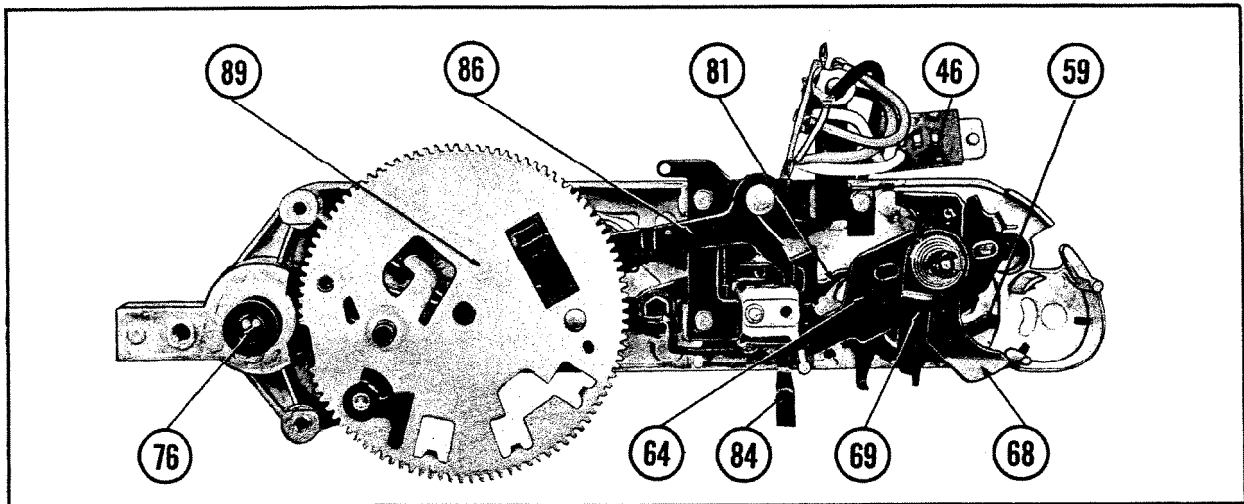


Bottom View Of Cycling Mechanism With Slide Removed.

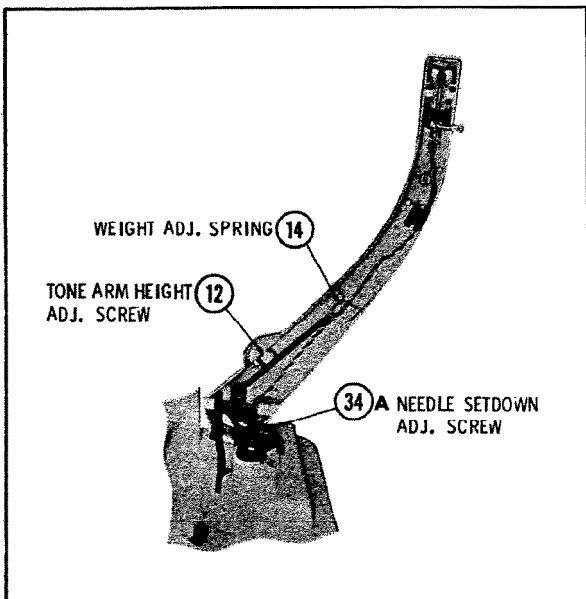


Tone Arm Adjustment Points.

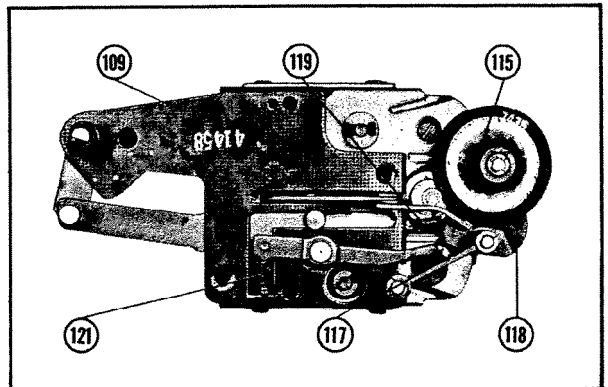


Top View Of Motor.

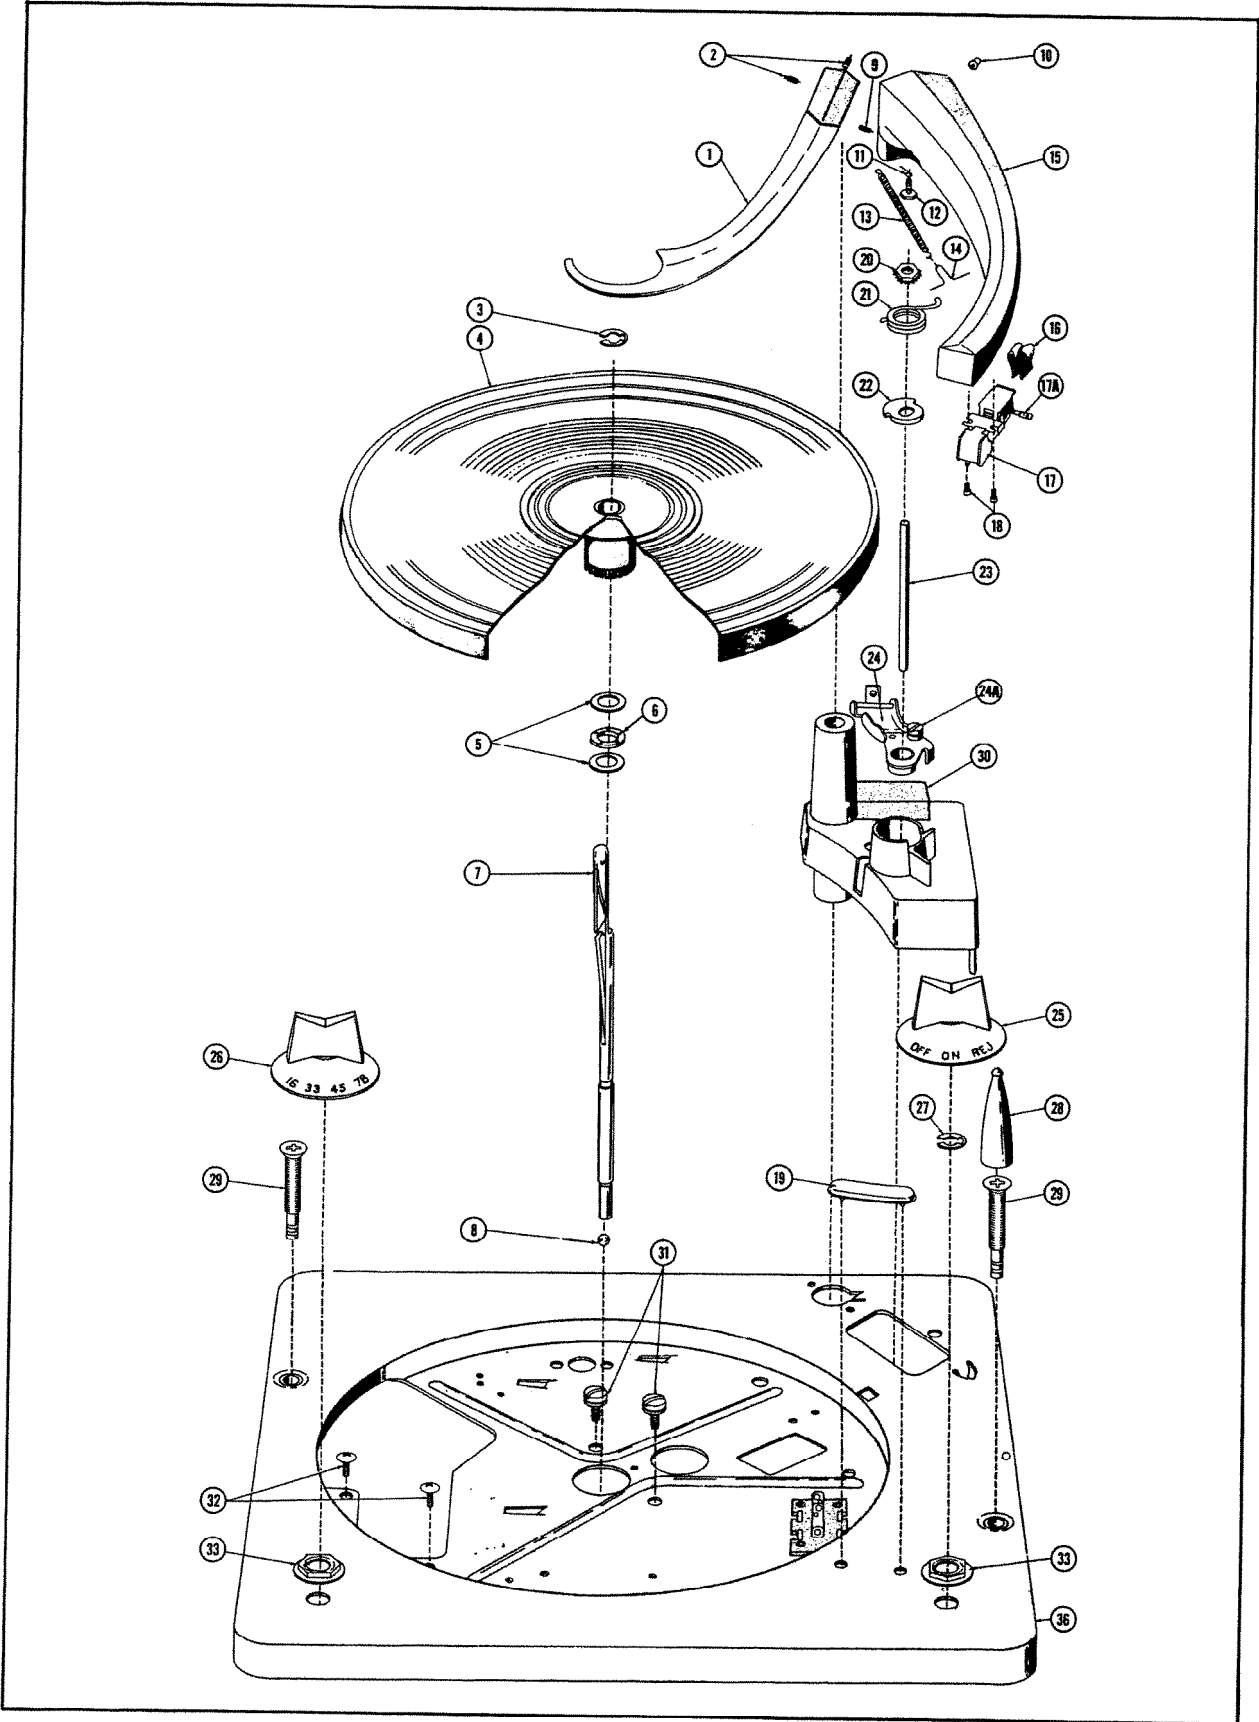

Exploded View of Parts Above Baseplate.

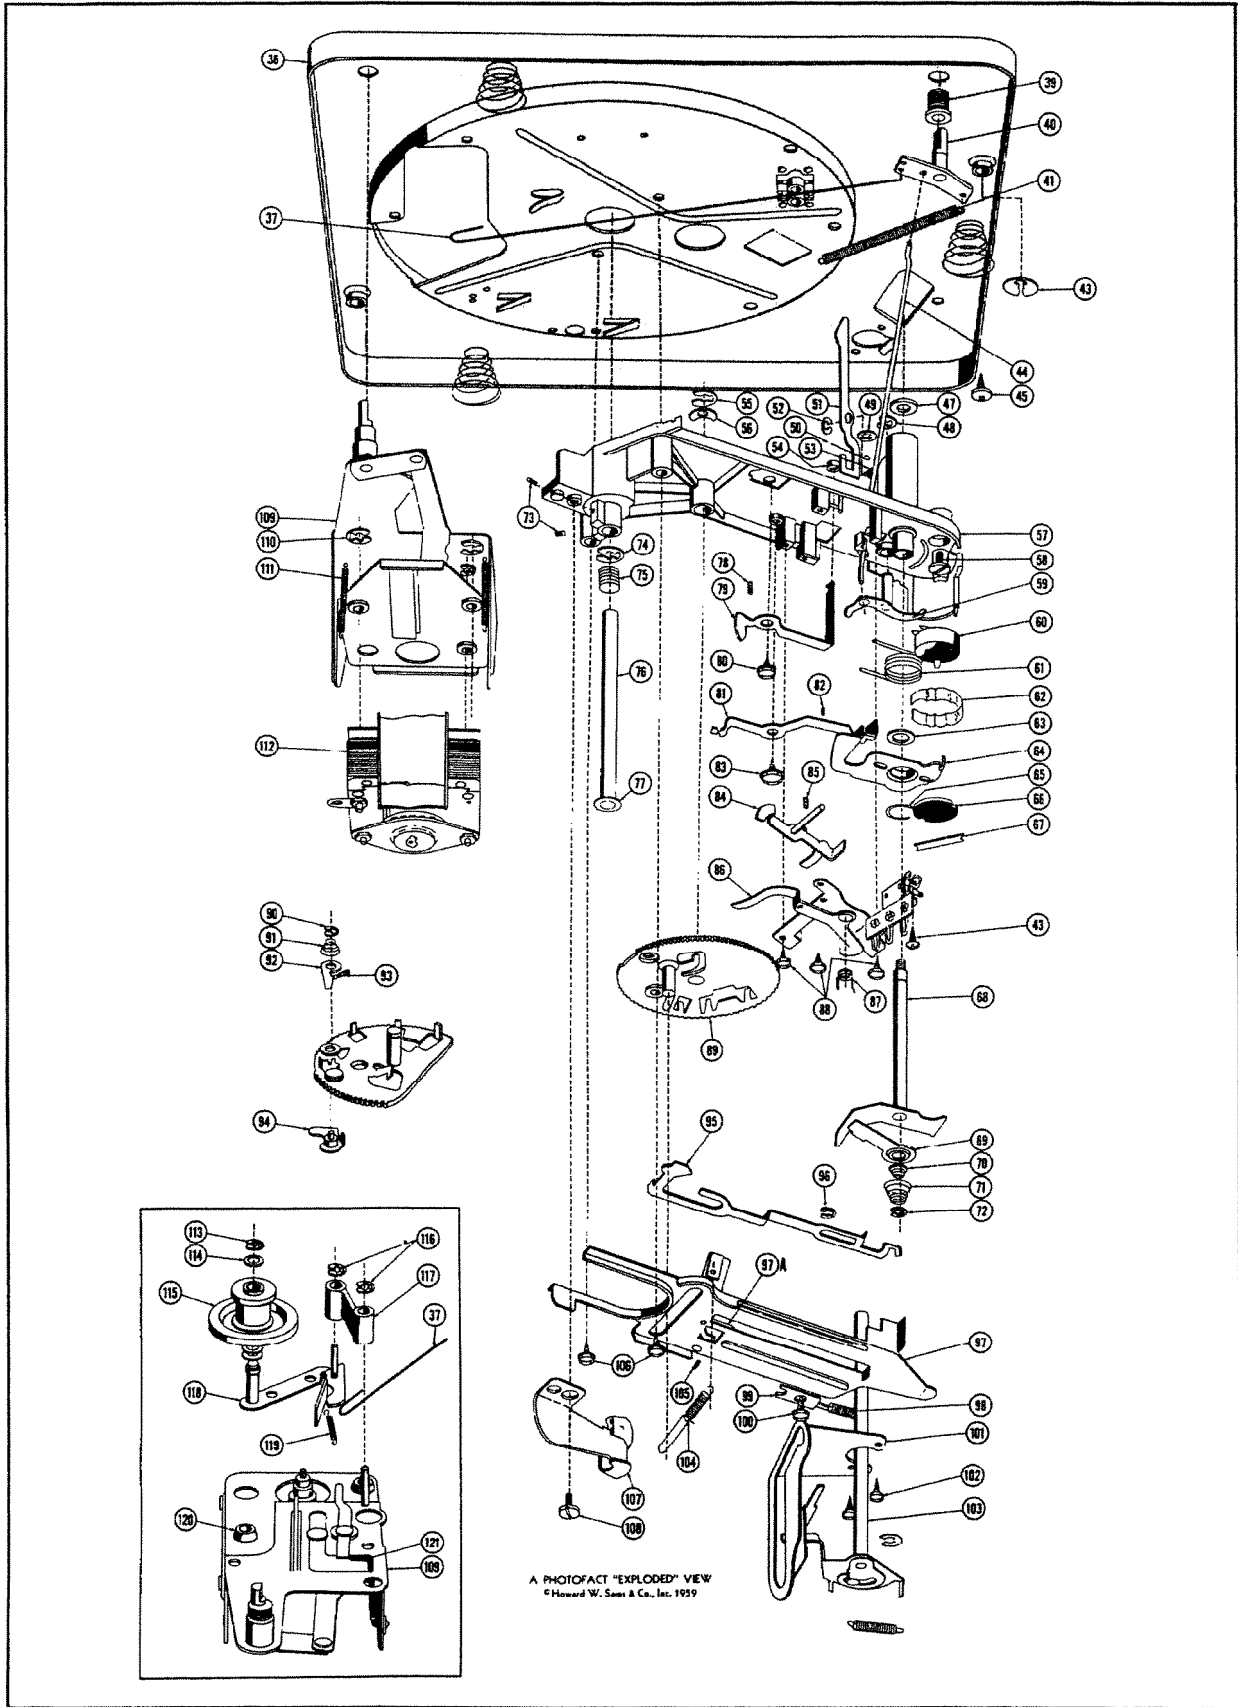

Exploded View of Parts Below Baseplate.

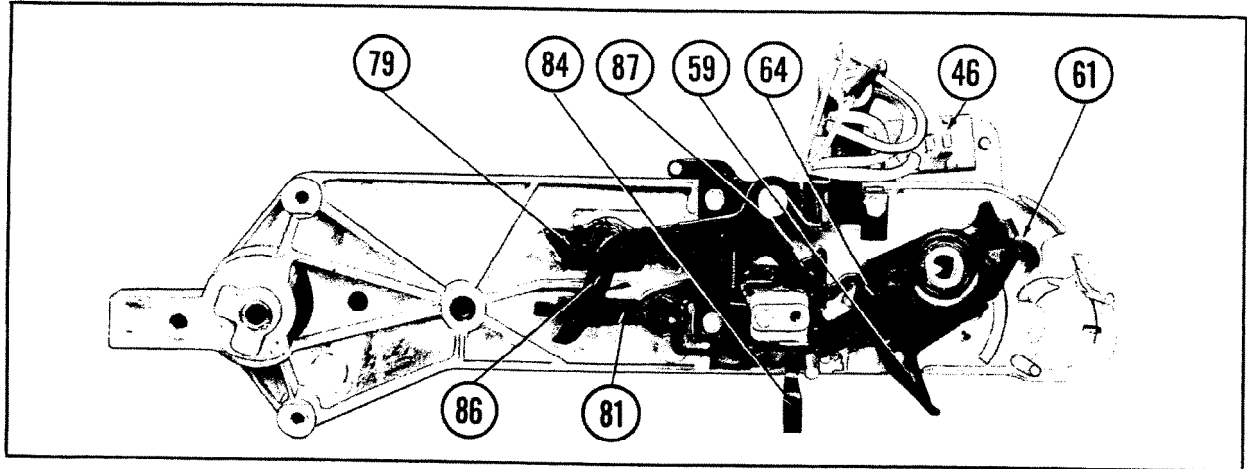

Bottom View of Cycling Mechanism With Slide and Cam Gear Removed.

RECORD CHANGER PARTS LIST

Ref. No.	Part No.	Description
1	N-23534D	Record Support
2	N-14603	Set Screw
3	N-1650	"C" Washer, Turntable Retainer
4	*N-9455	Turntable Assembly
5	N-6877	Bearing Washer
6	N-6876	Bearing Retainer
7	N-6049	Spindle Assembly
8	N-6884	Spindle Ball Tone Arm & Hinge Ass'y.
9	N-4923	Pivot Screw
10	N-4922	Hinge Button
11	N-7634	Lock Spring
12	N-7635	Lift Screw
13	N-14431	Hinge Spring
14	N-15293	Weight Adjusting Spring
15	*N-19111	Tone Arm
16	N-6963	Tone Arm Clip
17	N-38021	Cartridge
17A	N-36020	Needle Unit
18	N-18427	Cartridge Mounting Screw
19	N-9375	Needle Protector
20	N-14498	Keps Nut
21	N-4937	Safety Spring
22	N-4339	Safety Plate
23	N-4327	Lift Pin
24	N-4072	Hinge Arm Assembly
24A		Set Down Adj. Screw (Part of Item 24)
25	N-16794A46	Knob, On-Off Rej.
26	N-16793A46	Knob, Speed Control
27	N-1719	"C" Washer
28	*N-5573	Rest Post
29	N-15044	Mounting Bolt
30	N-8404	Rubber Pad, Tone Arm
31	N-9823	Screw, Works Assembly Mounting
32	N-6929	Screw, Motor Assembly Mounting
33	N-8398	Pal Nut
36	*N-19001	Baseplate Assembly
37	N-16810	Retraction Rod
39	N-6916	Control Bushing
40	N-7114	Control Lever Assembly
41	N-7113	Reject Spring
43	N-1736	"C" Washer (Mounting Bolts)
44	N-6919	Reject Rod
45	N-2916	Screw, Rest Post Mounting
47	N-2952	Fiber Washer
48	N-1652	"C" Washer
49	N-1720	Speed Nut
50	N-2563	Spring, 12" Record Selector
51	N-2957	12" Record Selector
52	N-1588	"C" Washer
53	N-4172	Spring, 12" Selector
54	N-2580	Rubber Bumper
55	N-1719	"C" Washer, Gear Mounting
56	N-9762	Spring Washer, Gear Mounting
57	N-15451	Frame Assembly
58	N-9823	Screw
59	N-2284	Control Shaft Assembly
60	N-467	AC Switch
61	N-9533	Return Spring
62	N-2931	Fiber Insulating Strip

Ref. No.	Part No.	Description
63	N-4950	Fiber Washer (Part of Item 64)
64	N-6405	Locator and Bushing Assembly
65	N-5828	Locator Ring
66	N-2573	Switch Cover
67	N-4212	Retainer, Switch Cover
68	N-15450	Finger and Shaft Assembly
69	N-9557	Retard Lever
70	N-9510	Anti-Skate Spring
71	N-9509	Lift Pin Spring
72	N-1588	"C" Washer
73	N-6955	Set Screw
74	N-5022	"C" Washer
75	N-6885	Safety Spring
76	N-6874	Push Rod
77	N-6883	Thrust Washer
78	N-2579	Spring, 7" Lever
79	N-2581	7" Lever
80	N-9849	Screw
81	N-6007	Reset Lever
82	N-2925	Spring, Reset Lever
83	N-9849	Screw
84	N-6966	Shut-Off Lever Assembly
85	N-9663	Spring, Shut-Off Lever
86	N-19154	Retard Assembly
87	N-16817	Spring, Retard Arm
88	N-6713	Screw
89	N-7125	Gear Assembly
90	N-1588	"C" Washer
91	N-4172	Spring
92	N-5339	Pawl Lever
93	N-5338	Spring, Pawl Lever
94	N-2569	Trip Lever Assembly
95	N-4656	Trip Link
96	N-1588	"C" Washer
97	N-7121	Slide Assembly
97A		Escape Lever (Part of Item 97)
98	N-2246	Spring, Slide Bearing
99	N-2211	Slide Bearing
100	N-9849	Screw
101	N-6931	Record Support Guide Assembly
102	N-4857	Screw
103		Record Support Shaft
104	N-7120	Detent Spring and Link Assembly
105	N-2585	Spring, Escape Lever
106	N-9849	Screw
107	N-14420	Ejector Bracket
108	N-9823	Screw
	N-18361	Motor Assembly, Complete, 117V, 60 Cycle
109	N-18398	Motor Plate Assembly
110	N-5022	"C" Washer
111	N-7434	Counter Balance Spring
112	N-9134	Motor
113	N-1652	"C" Washer
114	N-2583	Fiber Washer
115	N-19388	Idler Pulley
116	N-1652	"C" Washer
117	N-7437	Idler Link
118	N-7438	Idler Arm Assembly
119	N-7439	Idler Spring
120	N-6631	Motor Mounting Grommet
121	N-6947	Detent Spring